



Suggested Crossover Settings

ICON 8 TOWERS

- HIGH PASS crossover selected with the frequency set at 80Hz

REV 8 TOWERS

- HIGH PASS crossover selected with the frequency set at 80Hz

REV 10 TOWERS

- HIGH PASS crossover selected with the frequency set at 80Hz

REV 410 TOWERS

- HIGH PASS crossover selected with the frequency set at 80Hz

REV 10 HD TOWERS

- HIGH PASS crossover selected with the frequency set at 80Hz

REV 12 HD TOWERS

- HIGH PASS crossover selected with the frequency set at 80Hz

6" COAXIALS

- HIGH PASS crossover selected with the frequency set at 80Hz

8" COAXIALS

- HIGH PASS crossover selected with the frequency set at 80Hz

10" (CX10) COAXIALS

- HIGH PASS crossover selected with the frequency set at 80Hz

8" SUBS

- LOW PASS crossover selected with the frequency set at 80Hz

10" SUBS

- LOW PASS crossover selected with the frequency set at 80Hz

12" SUBS

- LOW PASS crossover selected with the frequency set at 80Hz

15" SUBS

- LOW PASS crossover selected with the frequency set at 80Hz

REVO 12 PSE

- LOW PASS crossover selected with the frequency set at 80Hz
& Sub Sonic set between 35Hz - 40Hz