



# Zero 6 Application

Harley Davidson Road Glide 2015+





Once you have the pods removed locate the tab at the bottom area.

1




Remove the tab with flush cutters or can also grind it down flush.

2



Tab must be removed to allow the speaker to sit flush.

3

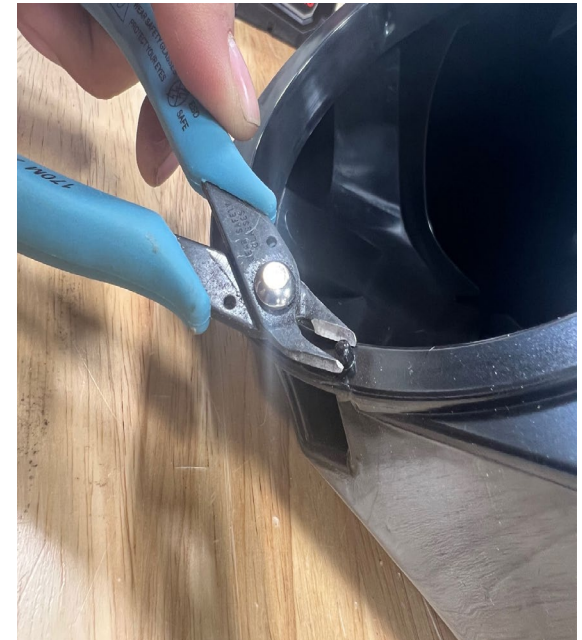

wet sounds®  
Road Glide Pod  
Modifications

You will need a  
2" hole saw to  
cut a hole out in  
the housing.

4



On the inside you will  
need to cut or grind  
down the material in  
area of the hole.

5



Once you remove  
the material you  
can test fit the  
speaker.

6



Confirm that the  
speaker sits flush to  
make sure no other  
modifications are  
needed.

7



7.a





To cover and seal the hole, you can use a small square of sound dampening material of your choice.

8



Once the material is applied you are done with the modifications and can move on with the rest of the installation.

9








## Road Glide Pod Template

2" hole  
Saw cut  
out

Cut out template to lay  
over your dampening  
material to transfer  
shape and to cut out  
hole location.

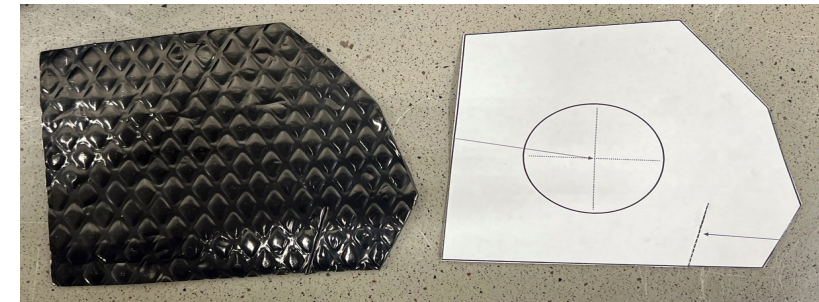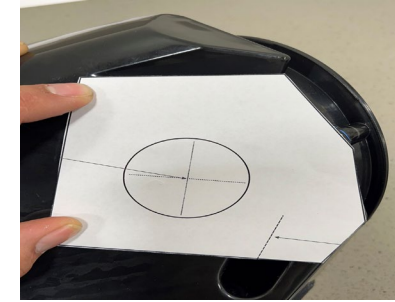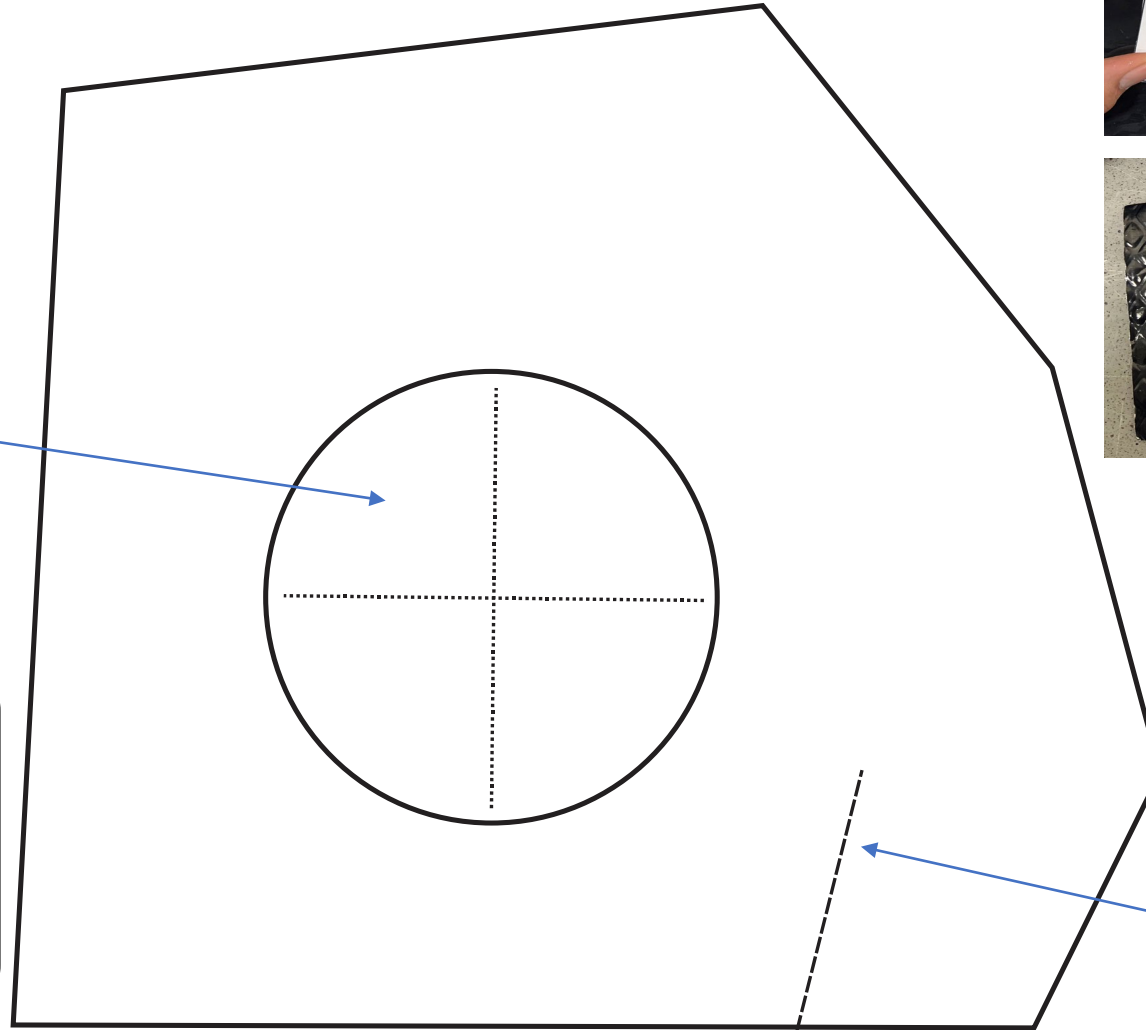

Cut slit for  
material to  
fold into  
bolt area