wet sounds

WS-MC-20-**FMK**
flush mount kit for WS-MC-20

Installation Guide

wet sounds®

WS-MC-20-**FMK**

PROUDLY
DESIGNED
IN THE
USA

877-938-7757

www.wetsounds.com

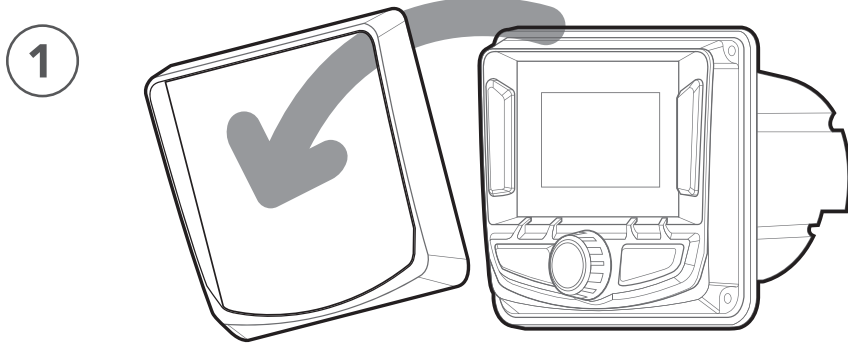10621 S. Sam Houston PKWY W, Suite 100
Houston, Texas 77071 USA
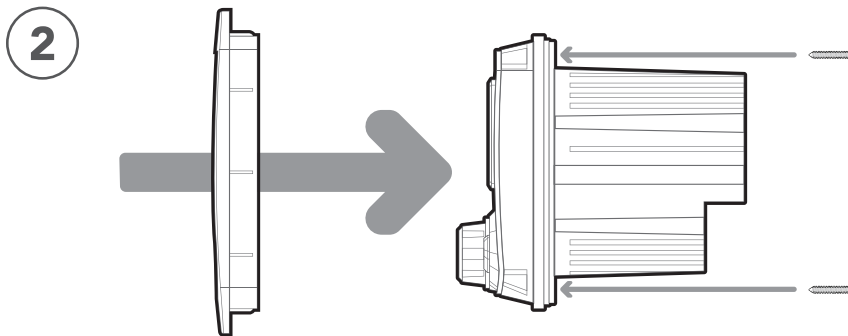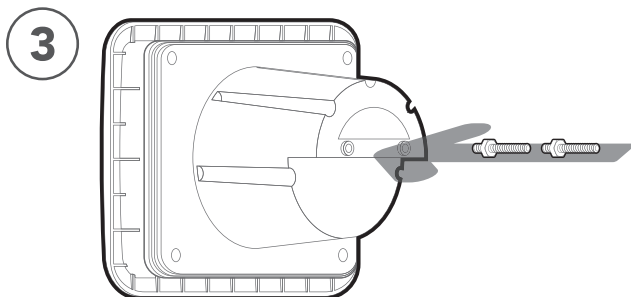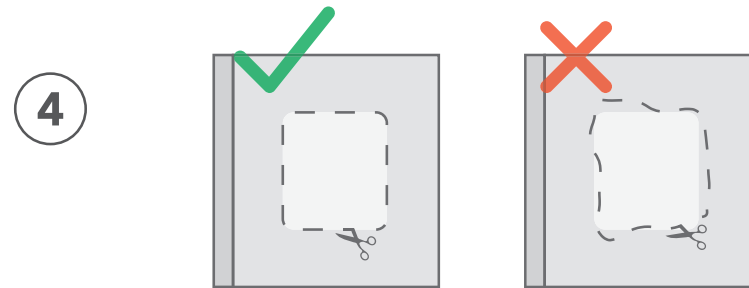
Installation Guide

1

●Remove Surface Mount trim using a soft trim tool to release plastic locking clips.
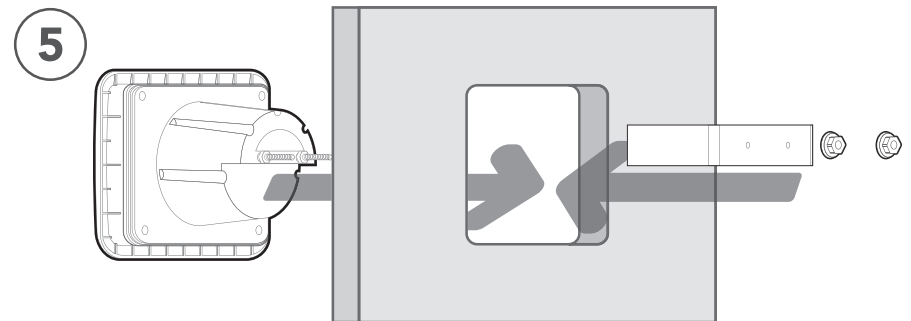
2

●Attach Flush Mount trim using the (4) screws included in the kit.
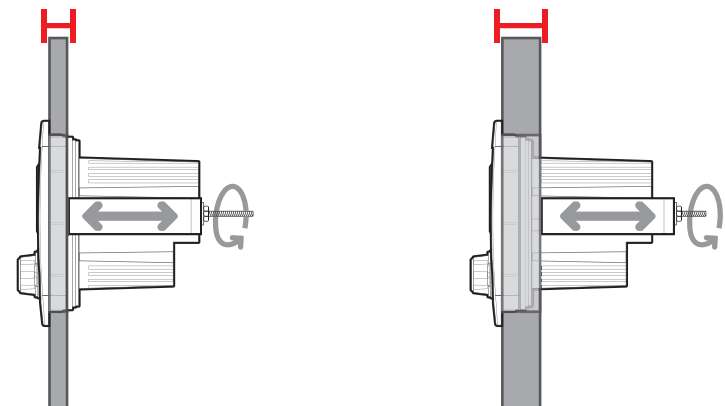
3

●Attach long mounting screws to the back of the unit.

4

●Use a template to mark a cut line. Avoid cutting outside the cut line to prevent improper fitment. Recommend taping the surrounding surface to prevent damaging the surface.
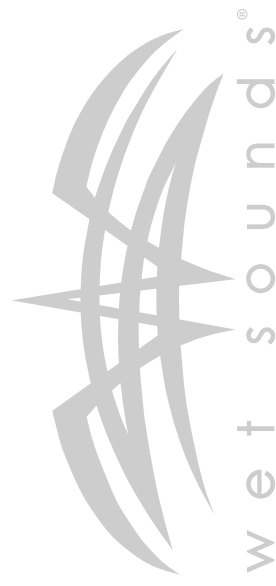
5

●Place unit into the opening and use the aluminum U-shaped bracket to sandwich the dash between the unit and rear bracket. Tighten the bracket to fit a variety of wall thicknesses.

wet sounds®

Cut Line Template

wet sounds®

Cut Line Template